



Universal Tablet Holder



UTH100

Quick Reference



UTH100
Part No.79330235



GP8000



GP8100



PD8050

Included in accessory kits



UHA100
Universal Table
Holder with chest
harness
Part No. 79339345



TRG100 GPR
telescopic rod and
tablet holder
Part No. 39380010




TRP100 PM8000
telescopic rod and
tablet holder
Part No. 39322010





Adjustable for iPad sizes up to 12.9"



12.9"

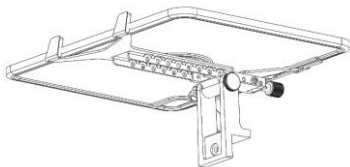


10.5"

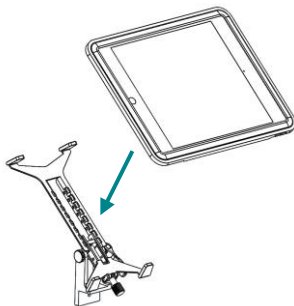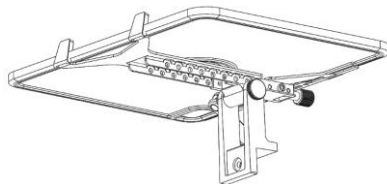


Adjust to tablet size – Step 1



Parts and tools	
346 10 522	Torx T20 key

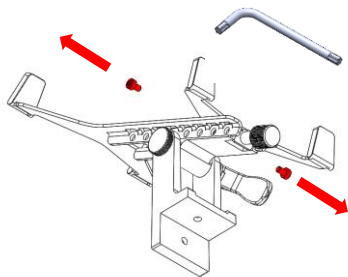

- Use the enclosed torx key to loosen the screws and remove them

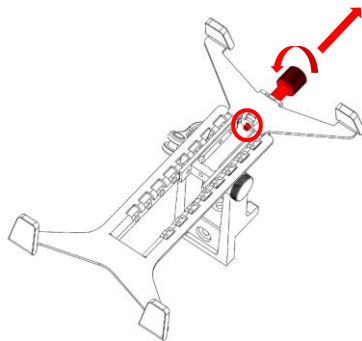


- Loosen the screw until a small tip is exposed (highlighted in red circle)


Adjust to tablet size – Step 2



Parts and tools	

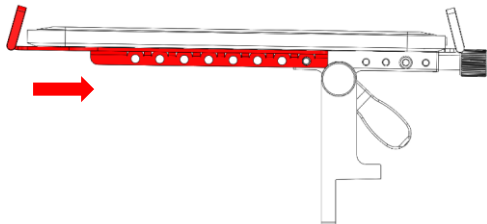

- Insert the iPad and slide the upper frame to roughly fit

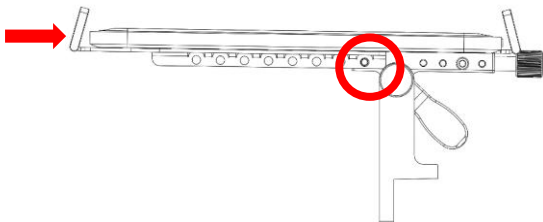

- Adjust until one of the holes of the upper frame and inner support is aligned (highlighted in red circle)
- Mark the hole
- Remove the iPad


Adjust to tablet size – Step 3




Parts and tools

346 10 522

Torx T20 key

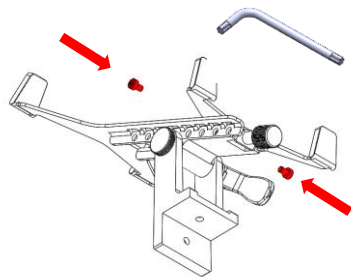


- Use the enclosed torx key to loosen the screws and remove them

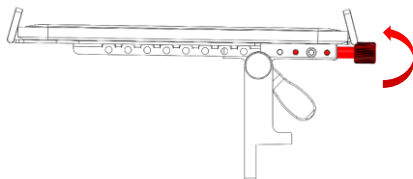


- Insert the iPad
- Tight the screw to fix in place


Adjustable orientation of the iPad

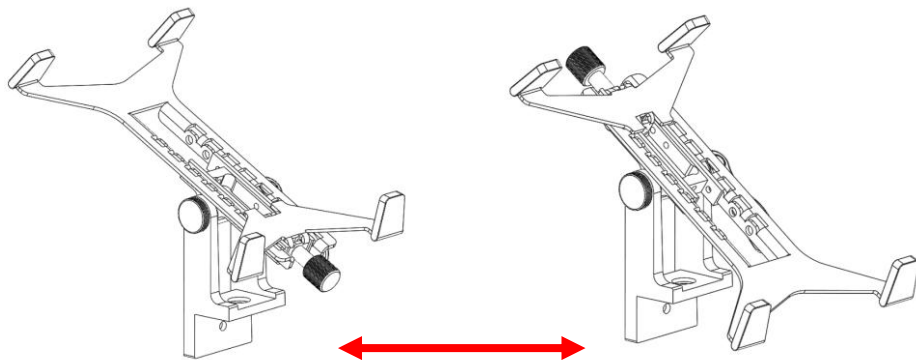

Adjust the orientation – Step 1

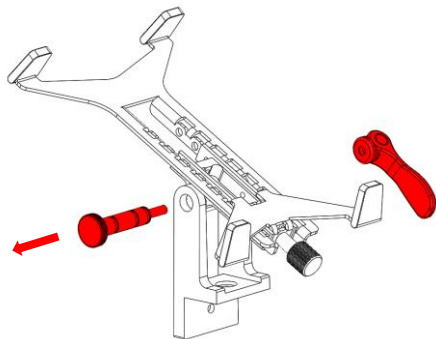


- Loosen the lever and pull out the bolt

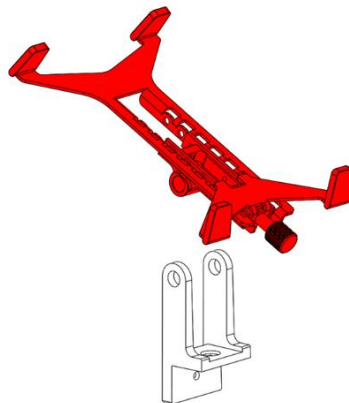



- Remove the tablet holder from the plastic mount

Adjust the orientation – Step 2

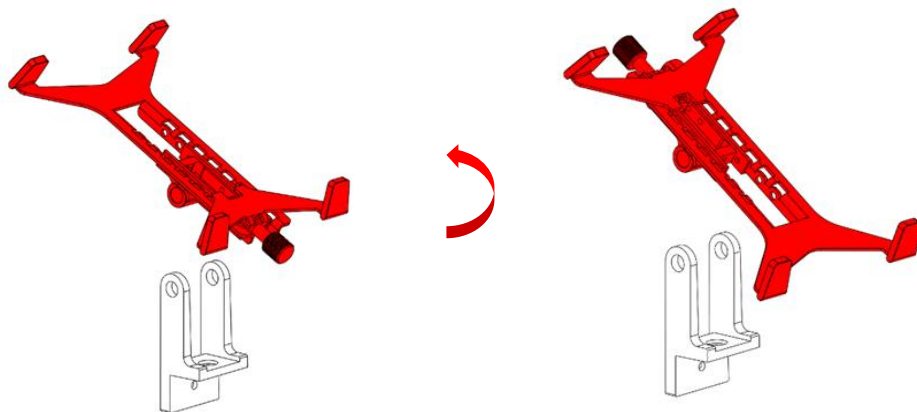



- Rotate the tablet holder by 180°

Adjust the orientation – Step 2

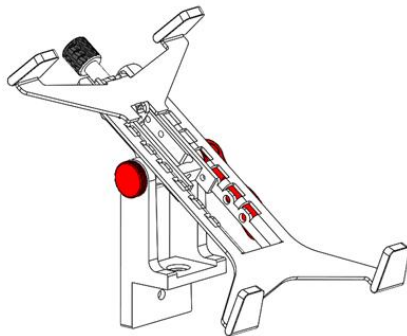
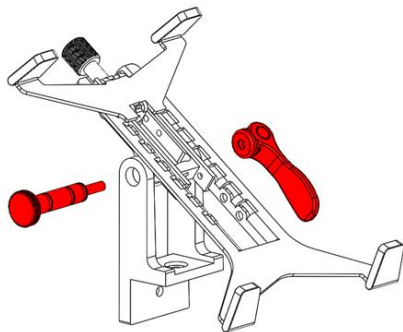


- Reinsert the bolt and tighten the lever to fix

Orientation examples

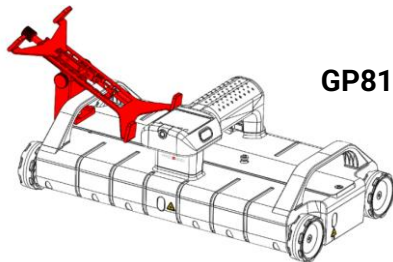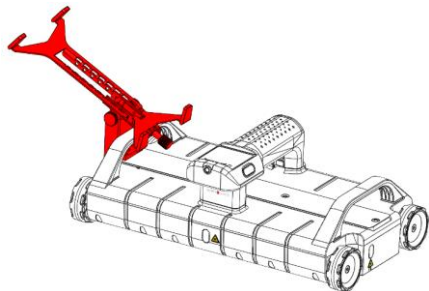

GP8100

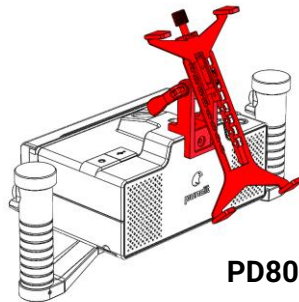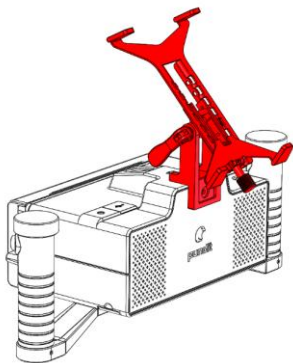

PD8050

For more information on the product use of the product, please refer to the RS8000 documentation

It is available for download on



<https://www.screeningeagle.com/en/products/rockschmidt>

SIA-PACIFIC

Proceq Asia Pte Ltd.
1 Fusionopolis Way
Connexis South Tower #20-02
Singapore 138632
T +65 6382 3966

CHINA

Proceq Trading Shanghai Co., Limited
Room 701, 7th Floor, Golden Block
407-1 Yishan Road, Xuhui District
200032 Shanghai | China
T +86 21 6317 7479

EUROPE

Proceq AG
Ringstrasse 2
8603 Schwerzenbach
Zurich | Switzerland
T +41 43 355 38 00

UK

Screening Eagle UK Limited
Bedford i-lab, Stannard Way
Priory Business Park
MK44 3RZ Bedford
London | United Kingdom
T +44 12 3483 4645

MIDDLE EAST AND AFRICA

Proceq Middle East and Africa
Sharjah Airport International
Free Zone | P.O.Box: 8365
United Arab Emirates
T +971 6 5578505

USA, CANADA & CENTRAL AMERICA

Screening Eagle USA Inc.
14205 N Mopac Expressway Suite 533
Austin, TX 78728 | United States

Screening Eagle USA Inc.
117 Corporation Drive
Aliquippa, PA 15001 | United States
T +1 724 512 0330

SOUTH AMERICA

Proceq SAO Equipamentos
de Medição Ltda.
Rua Paes Leme 136
Pinheiros, Sao Paulo
SP 05424-010 | Brasil
T +55 11 3083 3889