


Paper Schmidt



PS8000

Quick Reference

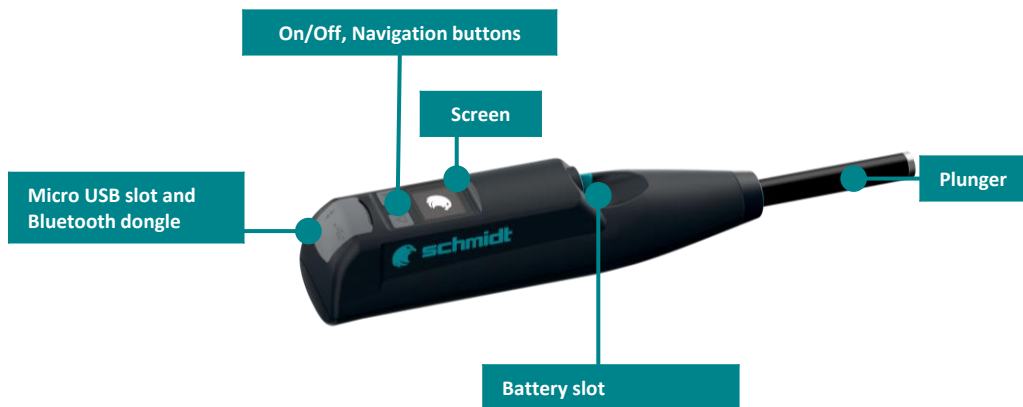




Device ON/OFF	
Short push	Power ON
Long push (>5s)	Power OFF
Operation	
Short push	Select / adjust
Long push (>1.4s)	Start new series (Store current series and start new series) Operation possible at any time



Operation	
Short push	Scroll down
Long push (>1.4s)	Backlight on/off

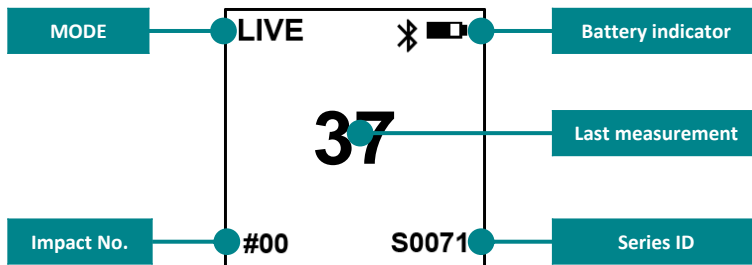

Mode

Configuration of operation mode

LIVE using the app
PRINT using a BT printer

Limits

Limit settings

UPPER Limit → Maximum allowed value
LOWER Limit → Minimum allowed value
None → no pass/fail criteria

Memory

Clear memory

Info

Show device information



HOME/MEASUREMENT screen



MAIN MENU



Mode Selection



SCROLL



SELECT

Setting Limits



SCROLL



SELECT/ADJUST

Clear Memory



SCROLL



SELECT



Unsynchronized data will be lost

Info




SCROLL



SELECT



HOME/MEASUREMENT screen

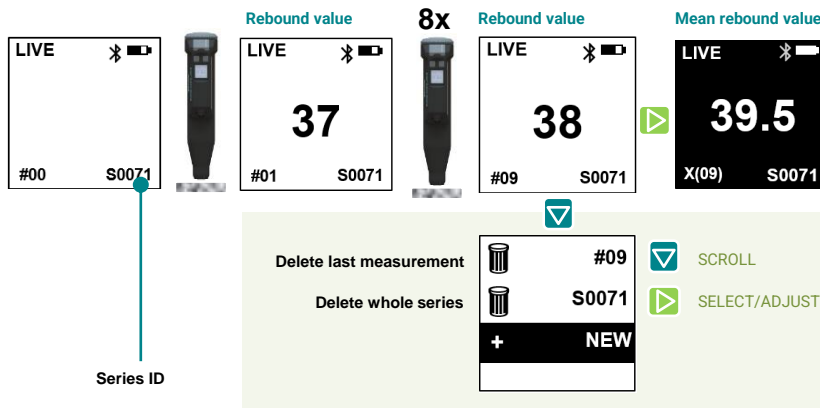


Auto-switch off

No activity > 5 minutes




Current series is saved
Current series is closed
Power off


Scroll through results

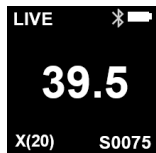


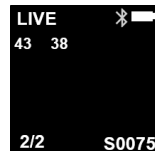
Delete whole series

Start new series

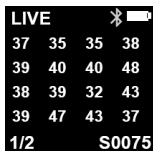

 S0075

 NEW




SCROLL






SELECT/ADJUST




Return to series

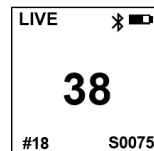


Scroll through results

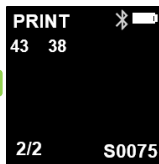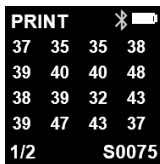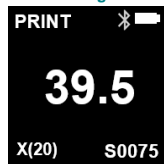

Return to series

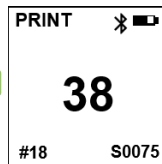

Print series

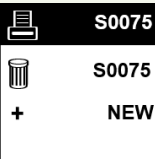

Delete whole series

Start new series



SCROLL



SELECT/ADJUST



Further Information

Requires a BT printer → available as accessory

Configuration for printing → [Mode selection](#)

For more information on the product use of the product, please refer
to the PS8000 documentation

It is available for download on



<https://www.screeningeagle.com/en/products/paperschmidt>

ASIA-PACIFIC

Proceq Asia Pte Ltd.
1 Fusionopolis Way
Connexis South Tower #20-02
Singapore 138632
T +65 6382 3966

CHINA

Proceq Trading Shanghai Co., Limited
Room 701, 7th Floor, Golden Block
407-1 Yishan Road, Xuhui District
200032 Shanghai | China
T +86 21 6317 7479

EUROPE

Proceq AG
Ringstrasse 2
8603 Schwerzenbach
Zurich | Switzerland
T +41 43 355 38 00

UK

Screening Eagle UK Limited
Bedford i-lab, Stannard Way
Priory Business Park
MK44 3RZ Bedford
London | United Kingdom
T +44 12 3483 4645

MIDDLE EAST AND AFRICA

Proceq Middle East and Africa
Sharjah Airport International
Free Zone | P.O.Box: 8365
United Arab Emirates
T +971 6 5578505

USA, CANADA & CENTRAL AMERICA

Screening Eagle USA Inc.
14205 N Mopac Expressway Suite 533
Austin, TX 78728 | United States

Screening Eagle USA Inc.
117 Corporation Drive
Aliquippa, PA 15001 | United States
T +1 724 512 0330

SOUTH AMERICA

Proceq SAO Equipamentos
de Medição Ltda.
Rua Paes Leme 136
Pinheiros, Sao Paulo
SP 05424-010 | Brasil
T +55 11 3083 3889